
Volkswagen Type 2 (T1) Bus Rechargeable Bluetooth Speaker

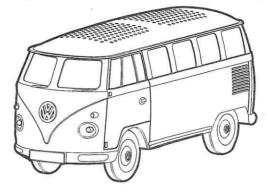



User Manual

Connecting to Bluetooth®:

- 1) Turn your speaker on by pressing and holding the power button on the rear of the van. The LED will flash yellow and the speaker will sound to show it is switched on. This will automatically switch the Bluetooth on too.
- 2) The speaker will automatically attempt to reconnect to the last device it was paired to.
- If the device is not in range, or it is the first time you have connected, it will go into pairing mode.
- 3) You can now pair your device with the speaker. Make sure Bluetooth is activated on your device, then select **VW Camper** from the list of available devices.
- 4) The speaker will sound when the device has been successfully connected, and the LED will turn to a solid yellow light. Using your device you can now play music. Use the device controls to change the volume.

Troubleshooting:

If you are having problems connecting, it may be because another device is already connected.


Press the power button for 1 second to break this connection (any longer will turn the unit off).

If you are still having problems turn your Bluetooth and the speaker off, then restart the instructions listed above.

Using the audio jack:

If your device does not support Bluetooth, you will need to use an AUX cable (not included) to connect directly to the speaker. When this type of connection is used the Bluetooth mode will switch off automatically, and the LED will not light.

Description of Parts:

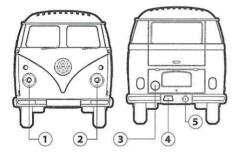


- 1 2 Headlamp indicator light
- 3 On/Off Button
- 4 Mini USB for charging
- (5) 3.5 mm audio jack input

Charging:

Bluetooth

oth® word mark and logos are

gistered trademarks owned by bluetooth SIG, Inc. and any use of such marks is under licence.

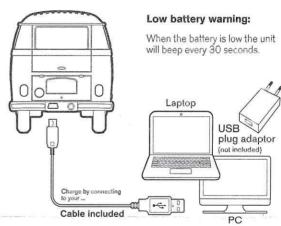

Bluetooth Speaker

Specification:

Speaker output: 2 x 3W 4ohm Bluetooth Version: BT 3.0

Operating range: Up to 10 m in open space Battery: Built in Li-ion rechargeable 500mAh

Battery charging time: Approx. 3 hours

Music playback time: Approx. 5 hours from full charge

(please note this will depend on how loudly the music is being played)

Connections: Mini USB charging point 3.5 mm Aux in Jack

Under the environment with electrostatic discharge, the sample may malfunction. It requires user to reset the sample.

Care and Maintenance:

Clean with a soft, lint free cloth. This is a closed unit. Do not attempt to disassemble. Do not short-circuit the batteries! There is risk of explosions and fire!

Keep away from rain or moisture. There is risk of fire and/or damage to the unit.

Do not operate near open water. Keep away from sources of heat or burning objects.

Never listen to music at very high volumes! This can damage your hearing.



ьН

BRISA Entertainment GmbH Hauptstrasse 6 85462 Reisen I Germany

www.brisa.com



This product is not a toy.

Not suitable for children.

Packaging has to be kept since it
contains important information.

BRISA ENTERTAINMENT GmbH hereby declares that this product is in accordance with the requirements of directives 2014/30/EC, 2006/95/EC, 2011/65/EC and R&TTE 1999/5/EC. The full text of the EC Declaration of Conformity is available at the following Internet address: https://www.vw-collection-by-brisa.de/media/pdf/0f/ba/fe/EG-Konformit-tserkl-rung-Bluetooth-Lautsprecher_BUBS01-02.pdf