

Travel cot VanKid for VW T6.1, T6, T5, T4

The baby cot for the driver's cab
for children from 0 months to approx. 4 years



Assembly instructions

Let's begin

This is how the VW van becomes a family camper



We have:

- Metal frame in silver for the canopy, consisting of:
 - 2 curved rods and 4 straight rods
- Metal frame in black for the lower part, consisting of:
 - 2 curved rods
 - 2 rods with adjustable lengths
 - 4 more poles
- Folding mattress with tent poles
- Fabric for the lower part
- Mesh fabric for the canopy

Please note: The new Vankid only has a side marking on the metal frame. The pictures show the old model with two stickers.

Step 1: The metal frames

Put the individual parts of the metal frames together. The black frame is for the lower part, the silver one for the canopy.

For the black metal frame, two "normal" Rods and an adjustable rod are needed. When used in the T4, the adjustment levers can be used to adjust the required length.

The arrangement of the normal rods does not matter, the rods with adjustable level for the length must be attached to the wider curved shape. For the silver metal frame, two normal rods are needed per side. The order does not matter.



Step 2: Preparing the lying surface




The lying surface of the bed (the lower part) will be hung in the driver's cabin with the metal frame. First the underside should be reinforced with the help of tent poles



To do this, put the first tent pole together and attach to one of the long sides through all the black tabs up to the last closed tab.





In order to attach the tent pole on the opposite side, open the tab. Place the rod in the open tab and then close it by using the Velcro.

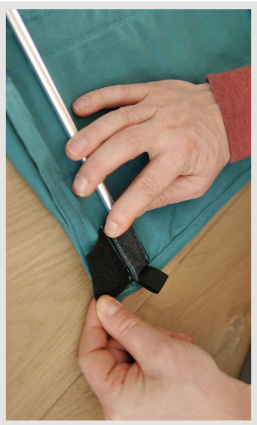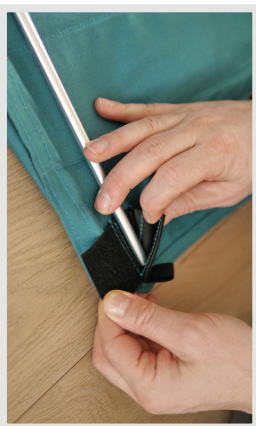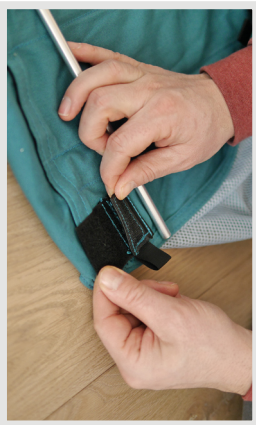

Then attach the second tent pole on the other side through all the tabs and fasten it as described above.

Step 3: Attaching the lying surface to the metal frame


The lying surface will later rest on the front seats. Put the fabric and the black metal frame together. The easiest way is to set up the bed in the correct position, meaning the narrow side to the right where the steering wheel of the van is. The fabric is attached to both long sides of the metal frame with zippers.

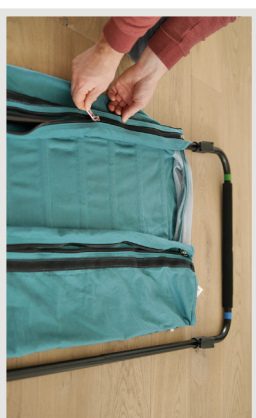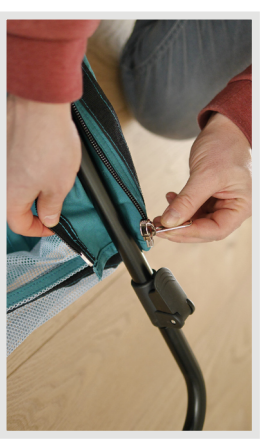

Step 4: Attaching the canopy to the metal frame

Attach the canopy onto the silver metal frame with the zipper.

Important: The Velcro fasteners for the handles must be positioned on the short sides and the Velcro strip on the lower part must run along the inside.

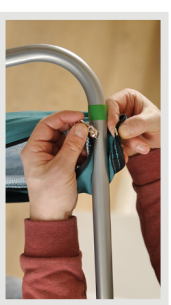




Step 5: Placing the lower part in the van

The steering wheel should be placed in the starting position enabling enough space for the bed. Push the metal frame with the lower part through the open window into the driver's cabin. The frame is then lying on the window fittings and has a straight, stable position. Now place the folding mattress inside and the lying surface is ready.




Step 6: Attaching the canopy to the handles

The canopy is held in place by loops with double-sided Velcro fasteners on the handles. They are similar to the sturdy leash attachment that surfers use to secure their board to their leg. Push the one-sided Velcro „without bottom“ through the handle. The double-sided Velcro is attached from the outside. Then attach the Velcro “without top” from the inside back to the double-sided one.

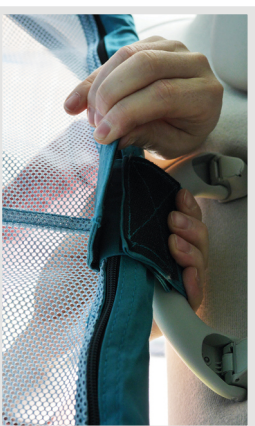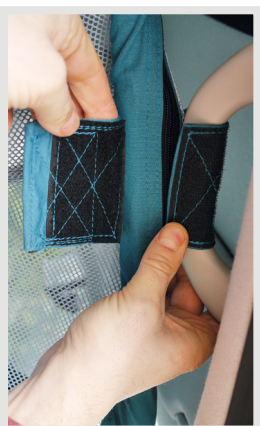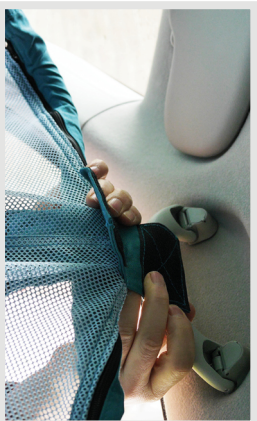

Step 7: Connecting the canopy to the lower part

The canopy is attached to the lower part via Velcro fasteners as well as press studs. Please make sure that the Velcro is even and smooth all round. Thus the bedroom is completed in a way that the child does not climb out, fall or can reach outwards. The bed can be opened and closed via a zipper between the front seats.

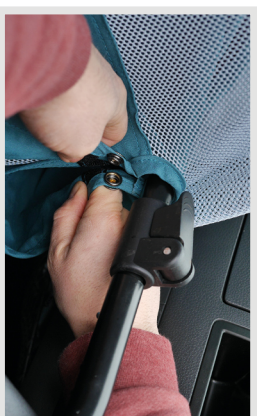

Specifications:

- Lower part: 25 cm high, lying surface 115 cm long, 40–55 cm wide (narrows towards the steering wheel)
- Top part: from bottom of the bed to the suspension approx. 80 cm
- Frame length: variably adjustable to 167–187 cm
- Packing size: 60 x 30 x 18 cm

All information in the instructions is provided without guarantee for its correctness. Under no circumstances will liability be assumed for damages resulting from the use of the information retrieved. The legal liability is based on restrictions of the company's assets.

ATTENTION

- Please set up the baby cot only as described in these instructions. Changes to individual elements or the build can lead to serious injuries.
- If you leave your baby unattended in the crib, make sure that the top of the bed (the canopy) is firmly attached to the lower part and the zipper at the entrance is securely locked between the front seats of the van.
- Never place the baby cot near an open fire or strong heat source.
- Do not use the baby cot if individual parts are broken, torn, damaged or missing. Only use original spare parts from the manufacturer.
- Do not leave items in the baby cot or near the bed, that could be used to climb out or that pose risk of suffocation and strangulation such as cords, thick pillows etc.
- Always use the baby cot together with the mattress supplied and never use another mattress. Also, never put more than one mattress in the baby bed. Babies can suffocate if gaps form in the bed due to mattresses and pads that are too small or too thick.

SpaceCamper *Shop*

Wiesenweg 59
52072 Aachen

Tel.: +49 2407 5548676

E-Mail: service@spacecamper-shop.de

www.spacecamper-shop.de